



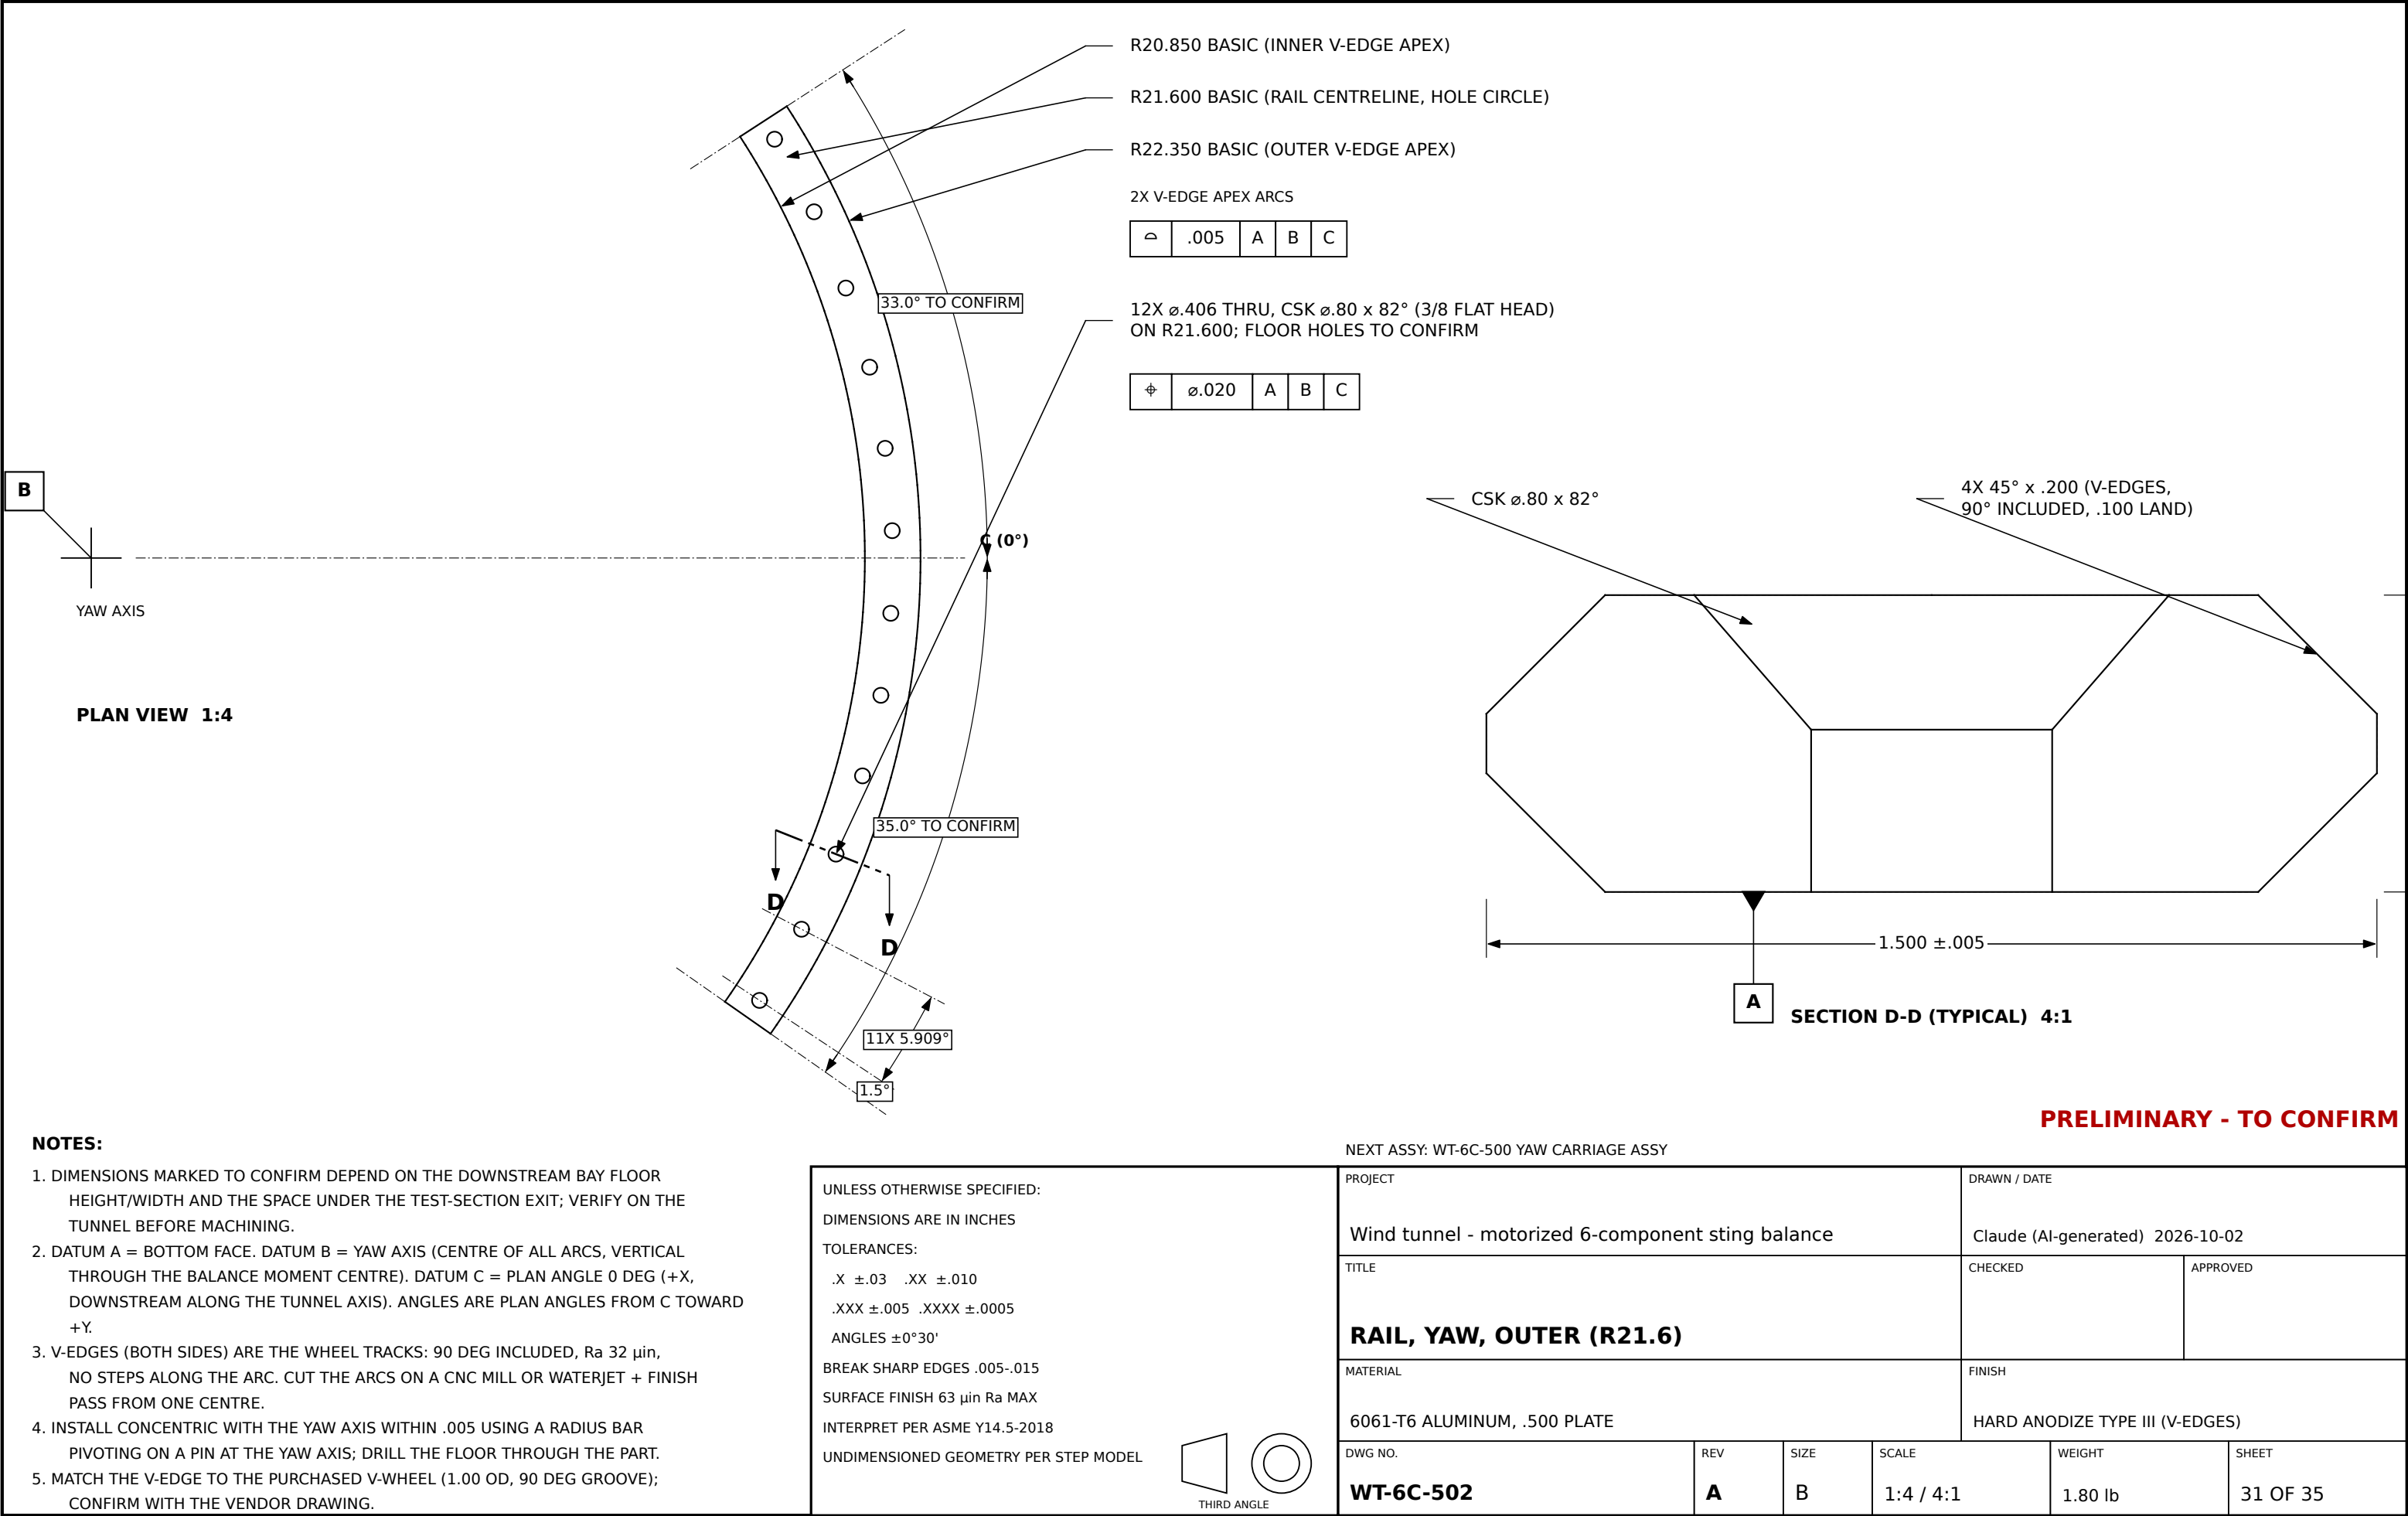

NOTES:

- DIMENSIONS MARKED TO CONFIRM DEPEND ON THE DOWNSTREAM BAY FLOOR HEIGHT/WIDTH AND THE SPACE UNDER THE TEST-SECTION EXIT; VERIFY ON THE TUNNEL BEFORE MACHINING.
- DATUM A = BOTTOM FACE. DATUM B = YAW AXIS (CENTRE OF ALL ARCS, VERTICAL THROUGH THE BALANCE MOMENT CENTRE). DATUM C = PLAN ANGLE 0 DEG (+X, DOWNSTREAM ALONG THE TUNNEL AXIS). ANGLES ARE PLAN ANGLES FROM C TOWARD +Y.
- V-EDGES (BOTH SIDES) ARE THE WHEEL TRACKS: 90 DEG INCLUDED, Ra 32 µin, NO STEPS ALONG THE ARC. CUT THE ARCS ON A CNC MILL OR WATERJET + FINISH PASS FROM ONE CENTRE.
- INSTALL CONCENTRIC WITH THE YAW AXIS WITHIN .005 USING A RADIUS BAR PIVOTING ON A PIN AT THE YAW AXIS; DRILL THE FLOOR THROUGH THE PART.
- MATCH THE V-EDGE TO THE PURCHASED V-WHEEL (1.00 OD, 90 DEG GROOVE); CONFIRM WITH THE VENDOR DRAWING.

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES
TOLERANCES:
.X ±.03 .XX ±.010
.XXX ±.005 .XXXX ±.0005
ANGLES ±0°30'
BREAK SHARP EDGES .005-.015
SURFACE FINISH 63 µin Ra MAX
INTERPRET PER ASME Y14.5-2018
UNDIMENSIONED GEOMETRY PER STEP MODEL



NEXT ASSY: WT-6C-500 YAW CARRIAGE ASSY

PROJECT				DRAWN / DATE			
Wind tunnel - motorized 6-component sting balance				Claude (AI-generated) 2026-10-02			
TITLE				CHECKED		APPROVED	
RAIL, YAW, OUTER (R21.6)							
MATERIAL				FINISH			
6061-T6 ALUMINUM, .500 PLATE				HARD ANODIZE TYPE III (V-EDGES)			
DWG NO.		REV	SIZE	SCALE		WEIGHT	SHEET
WT-6C-502		A	B	1:4 / 4:1		1.80 lb	31 OF 35